



ULTRA HIGH POWER TERMINATION

RFST1000G02 (DC-2GHz)


RFST1000G04 (DC-4GHz)

- **Ultra high power 1KW CW an 100K Peak**
- **Ultra high peak power 10KW (300us)**
- **Wide band operation**
- **Low VSWR and flat response**
- **Air cooling system**
- **Applications: Broadcasting, defence, radar communication**



1K WATTS ULTRA HIGH POWER TERMINATION

Electrical Specifications			
Frequency Range:	DC-2.0GHz OR DC-4.0GHz	VSWR max.	1.30 : 1
Power handle	1KW (CW)	Peak Power	100KW (5us pulse)
Mechanical and Environmental Specifications			
Operation Temperature:	-10°C to 50°C	Storage Temperature:	-40°C to 70°C
Connector:	L27, L29, L36, L52, EIA 5/8"	Dimension:	410×150×425mm 16.14" x 5.90" x 16.75"
Weight:	21Kg		
Operation Instruction:	<ol style="list-style-type: none"> 1. Connect input and output of attenuator to 50Ω impedance system. 2. Turn on air cooling FAN and verify the FAN is working properly. 3. Turn on system power. If possible, start from lower power, and increase the power step by step. 4. Before disconnect the attenuator, make sure turn off all the power (RF power and DC power) first. 5. Keep the air cooling FAN running until the attenuator case temperature reach room temperature. 6. One time operation should not exceed 1 hour at maximum CW power. 		
WARNING:	<ol style="list-style-type: none"> 1. Input average power must be < 1KW CW or 10KW peak (300us pulse) 2. This is directional attenuator. DO NOT CONNECT output port to input. 3. The unit is designed for Indoor application only, prevent all shock, vibration and humidity. 		
MAINTAINANCE	<ol style="list-style-type: none"> 1. Check input and output impedance before each time operation. The impedance should within 50Ω±2Ω. 2. Check cooling oil regularly in every 500 hours. Cooling oil color should be light yellow. If oil color turn to black or dark brown, it may be contaminated. Then the oil need to be replaced. 3. Clean input and output connector by alcohol regularly. 		

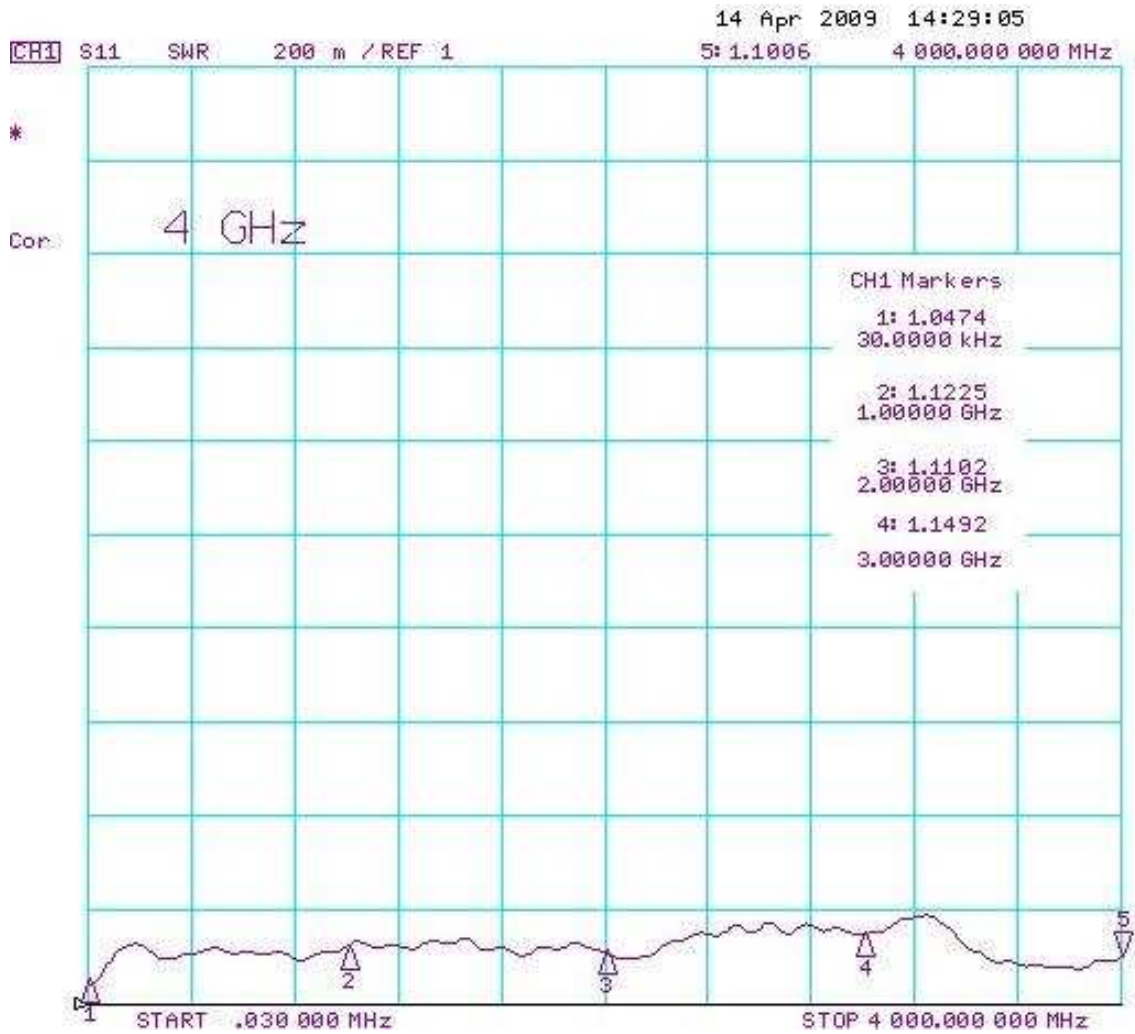

1K WATTS ULTRA HIGH POWER TERMINATION