

RF-LAMBDA

THE LEADER OF RF BROADBAND SOLUTIONS

40W Wideband EMC
Benchtop Power Amplifier
40GHz - 60GHz

REMC40G60GH



Sales: sales@rflambda.com

Technical: support@rflambda.com

Rev 2. 03-21-2026 | Subject to change without notice

www.rflambda.com

PRODUCT SUMMARY

PRODUCT OVERVIEW

GENERAL DESCRIPTION

REMC40G60GH is a wideband EMC power amplifier with a frequency range of 40 to 60GHz.

The power output of this amplifier is 46dBm typical. The typical small signal gain is 55dB with a flatness of ± 5 dB. This performance is achieved through the use of GaN devices. The power amplifier's input connector is 1.85mm-Male and Output connector WR-19. This product has a calibration feature which enables customer to obtain great performance through time and temperature changes. The operating temperature of this product is within 0°C to +50°C.



FEATURES

- » Wide band EMC Solid State Power Amplifier
- » Small Signal Gain 55dB Typical
- » Output Saturation Power 46dBm Typical
- » Supply Voltage 110/220 VAC
- » 50 Ohm Matched Input / Output
- » Fast RF Blanking
- » Real Time VSWR measurement
- » Internal Signal Generator – Optional
- » Over Temperature Protection
- » Over Current Protection
- » Over Voltage Protection
- » Auto Calibration

TYPICAL APPLICATIONS

- » Wireless Infrastructure
- » Military and Aerospace Applications
- » Test Instrumentation
- » Radar Systems
- » 5G Wireless Communications
- » Microwave Radio Systems
- » TR Modules
- » Research and Development
- » Cellular Base Stations

QUALITY STANDARDS



ESD Policy

https://rflambda.com/pdf/rflambda_esd_control.pdf

Random Vibration Test Standard

https://www.rflambda.com/pdf/rflambda_random_vibration_MIL-STD-202G.pdf

Connector Torque Specifications

https://www.rflambda.com/pdf/Torque_Specifications.pdf

Parameter	Description
Operational Temperature	0°C to +50°C (Ambient Temperature)
Thermal Shock	0°C → +50°C (5 Cycles / 10 hours, Only internal modules tested prior to final assembly)
*Random Vibration	MIL-STD-202G, Table 214-I, Test Condition Letter C, 1.5 Hours Per Axis
High Temperature Burn In	Temperature +50°C for 72 Hours
Storage Temperature	-40°C to +85°C

*For vibration testing details please see additional information section.

RF-Lambda is ISO: 9000 certified with 25,000 ft² combined R&D and production space, including an ISO7 10K Clean Room to meet ISO-14644-1.

PRODUCT FUNCTIONS



OUTPUT POWER LOCK




Local/Remote Control Toggle

Remote Control



Select control mode:
Local (direct) or Remote (network)

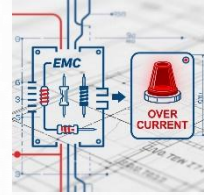

1 EMC Functions

- Output Power Lock
- Automatic Calibration

2 Mode Selections

- Local
- Remote Control

3 Product Safety Interlock

- Input Power Overload Protection
- Output Mismatch Protection
- Over Temperature Protection
- Over Current Protection
- Cooling System Anomaly Protection

Category	Function	Included	Optional (Licensing)	Optional (Hardware)	NOT Applicable
Product Safety Interlock	Input Overload Protection	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Output VSWR Protection	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Current Overload Protection	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Temperature Protection	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Current Imbalance Protection	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Overvoltage and Undervoltage Protection	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	AC Power Abnormality Protection	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Fan Abnormality Protection	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
User Operation Functions	USB, LAN Communication	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	DB Interface	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Self-Calibration Function	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Gain Compensation Over Temperature	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Current Compensation Over Temperature	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	TDD Control - RF Switch Enable	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	TDD Control - Positive Voltage Enable	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	TDD Control - Negative Voltage Enable	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	GUI Interface	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Parameter Setting	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Gain Calibration Each Stage	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Software ON/OFF Function	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Modularized System Integration	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Remote Software Control ON/OFF	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
EMC Functions	Rotary Gain Adjustment	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Screen Protection Function	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Touch Screen Display	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Developer Interface	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
User Customization Functions	System Log Recording	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Output VSWR Measurement	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Input Power Measurement	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	ALC - Automatic Loop Control Gain	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	AGC - Automatic Gain Control Function	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Input Circulator Protection (Internal Load)	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
	Output Circulator Protection (Internal Load)	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
	Waveguide Adapter (E-H)	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Internal Signal Generator	Fast RF Blanking	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Single Frequency Output	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Frequency Auto Sweeping	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Frequency Hopping	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	External Signal	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

REMOTE CONTROL

EMC Amplifier Control Panel

Files Functions Help

RF-LAMBDA
THE LEADER OF RF BROADBAND SOLUTIONS

Control Interface USB ETHERNET

COM: COM170

Baudrate 115200

Connect

No Device Connected!

Notes:

1. Please click help menu to select Operation Manual.
2. Please refer to the Operation Manual to configure the port.

04/18 2025 v2.02

EMC Amplifier Control Panel

Files Functions Help

RF-LAMBDA
THE LEADER OF RF BROADBAND SOLUTIONS

Back ?

Input Power \pm dBm Output VSWR 1.29

Output Power **41.4** dBm

Temperature **25.5** °C

Frequency **6.000** GHz
Range: 0.600 - 6.000

Attenuation **0.0** dB
Range: 0.0 - 31.5

RF OUTPUT

ON

Disconnect

Set Freq

Set Atte

ALC

AGC

Current
 Current Imbalance
 Temperature
 Input Power
 Output VSWR
 General

Info Record

Time	Record
2025-10-10 09:	Start Reading Real-Time Data!
2025-10-10 09:	Device Connected!
2025-10-10 09:	Set RF-Output ON Successful!
2025-10-10 09:	Set Frequency as 6.000GHz Su

Save Clear

04/18 2025 v2.02

TECHNICAL DATA SPECIFICATIONS

Parameter	Min	Typ	Max	Units
Frequency Range	40		60	GHz
Small Signal Gain		55		dB
Gain Flatness		±5		dB
Gain Variation Over Temperature (0°C to 50°C)		±3		dB
Input VSWR		1.5	2	:1
Output 1dB Compression Point (P1dB)		40		dBm
Saturated Output Power (Psat)(CW)		46		dBm
Supply Current (220V AC)		4		A
Power Added Efficiency (PAE)		10		%
IM3		-30		dBc
Turn On/Off Speed (Switch Disable)	ON	100		ns
	OFF	100		ns
Turn On/Off Speed (Drain Disable)	ON	2000		us
	OFF	150		us
Turn On/Off Speed (Gate Disable)	ON	500		us
	OFF	200		us
RF Fast Blanking Speed (Optional) (Mute RF Output signal and noise)	ON	/		us
	OFF	/		us
Optional RF Fast Blanking Frequency (Optional)		/		kHz
Weight		- - Max		lbs.
Impedance		50		Ohms
*RF Input Power (RFIN)		Psat – Large Signal Gain		
Package		3U Rack-mount/Tabletop Chassis		
Cooling System		Forced air (Self-contained fan)		
Supply Voltage		90 to 264		VAC
Supply Frequency		47 to 63		Hz
Supply Power		1200		W

*Maximum RF input power is set to assure safety of amplifier. Input power may be increased at own risk to achieve full power of amplifier. Please reference gain and power curves.

INSTRUCTIONS FOR USE



CAUTION!

1. Please connect and turn OFF input RF signal.
2. Please verify output-load is connected.

ENTER



Signal Source Selection

[1] External Source **ESC**

[2] Internal Source **ENTER**

[2] Internal Source Function Not Licensed. Please contact Technical Support.



Output Status	ON	Band	18.0 - 40.0 GHz	
Frequency	22.8 GHz	Internal Source		MENU
Output Power	45.2 dBm			[1] Freq. Set
	33.1 W			[2] ALC Set
ALC	ON	AGC	OFF	[3] AGC Set
Temp.	35.2 °C/95.4 °F	Atten.	15.5 dB	RF ON/OFF

Please follow the instructions on the front panel LCD screen after switching on the power. Press “ENTER” on keypad to continue.

Please follow the instructions.

Name	Description
RF Output Status	Indicates instrument RF output status. It will display: ON or OFF
Frequency	RF input signal frequency (For illustrative purposes only)
Output Power	Instrument RF output power (For illustrative purposes only)
RF ON/OFF	Switches On or Off for instrument RF output port
ALC	ALC mode , Automatic Loop Control
AGC	AGC mode , Automatic Gain Control, this function is invalid
Temperature	Instrument temperature (For illustrative purposes only)
Attenuation	RF output attenuation (change with adjustment knob)

Power On/Off Procedure

Power On Procedure	Power Off Procedure
1. Connect the back panel grounding post to the common ground wire.	1. Turn off the RF output and the input source signal.
2. Connect RF input and RF output with 50 Ohm source/load. (In band VSWR < 1.9:1 or >10dB VSWR).	2. Turn off the unit, turn off the display, and enter standby mode.
3. Connect the AC power cord, turn on the AC switch, and enter standby mode.	3. Turn off the AC switch and remove the AC power cord.
4. Press the front panel switch button to enter operating mode.	4. Remove RF Connection.
5. Ensure the input signal is a low-power signal and turn on the RF output.	5. Remove ground.

*When using two identical devices simultaneously for testing or power combining applications, it is necessary to add reverse isolation protection measures at the output port of each device to prevent mutual interference from large signals between the devices under different operating conditions, which could cause equipment damage. For example: add an isolator at the output of each device.

INTERNAL SOURCE

Output Status	ON	Band	18.0 - 40.0 GHz
Frequency	22.8 GHz	MENU	
Output Power	45.2 dBm	[1] Freq. Set	
	33.1 W	[2] ALC Set	
ALC	ON	AGC	OFF
Temp.	35.2 °C/95.4 °F	Atten.	15.5 dB
			RF ON/OFF

To enter this function selection page, press "Menu" on front panel keypad while the instrument is showing the status page.

Signal Source Selection

Signal Source Selection

[1] External Source	<input checked="" type="checkbox"/>	ESC
[2] Internal Source	<input type="checkbox"/>	
[3] Internal Source Independent Output	<input type="checkbox"/>	

NOTE: The amplifier's RF output will turn off when the signal source is changed.

ENTER

Internal Signal Source Mode

Internal Signal Source Mode

[1] Single Frequency	<input checked="" type="checkbox"/>	ESC
[2] Sweep Frequency	<input type="checkbox"/>	
[3] Frequency Hopping	<input type="checkbox"/>	

ENTER

Single Frequency Setting

Signal Source Settings

Frequency (set)	12.500 GHz	ESC
Signal Level (set)	-6.5 dBm	

Please use the keypad to enter value.

ENTER

Real-Time Tuning of Single Frequency Point

Signal Source Settings

Output Status	ON	ESC
Output Power	45.8 dBm	
Frequency (set)	15.5 GHz	ENTER
Signal Level (set)	-5.5 dBm	

Please use the keypad to enter value and press 'ENTER' to confirm.

Frequency Sweep Setting

Frequency Sweep Settings

Start Freq.	18.0 GHz	ESC
Step Freq.	40.0 GHz	
Stop Freq.	0.5 GHz	
Delay	200 ms	
Signal Level	-5.5 dBm	

Enter the required data using the keypad, click "Enter" to start sweep.

ENTER

Frequency Hopping Setting

Frequency Hopping Settings

ID	Freq. (GHz)	Level (dBm)	Delay (ms)	ID	Freq. (GHz)	Level (dBm)	Delay (ms)
1				13			
2				14			
3				15			
4				16			
5				17			
6				18			
7				19			
8				20			
9				21			
10				22			
11				23			
12				24			


Please use the keypad to enter value, and press 'ENTER' to start the hopping.

ENTER


All action functions will ask for confirming execution when selected from function selection menu.

INTERFACE DESCRIPTION




FRONT PANEL

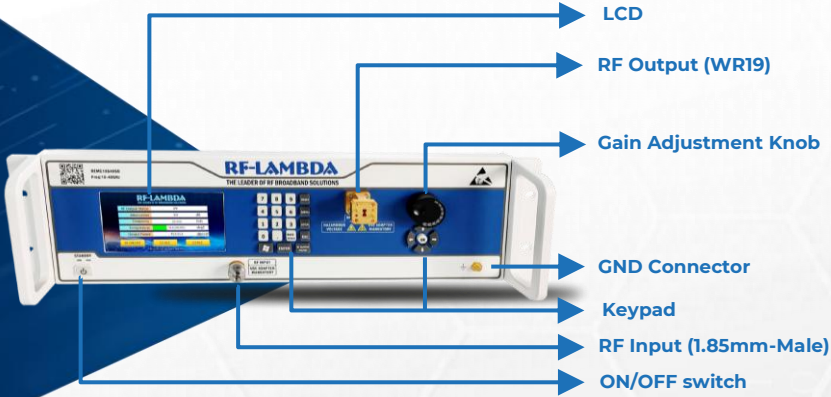

REAR PANEL

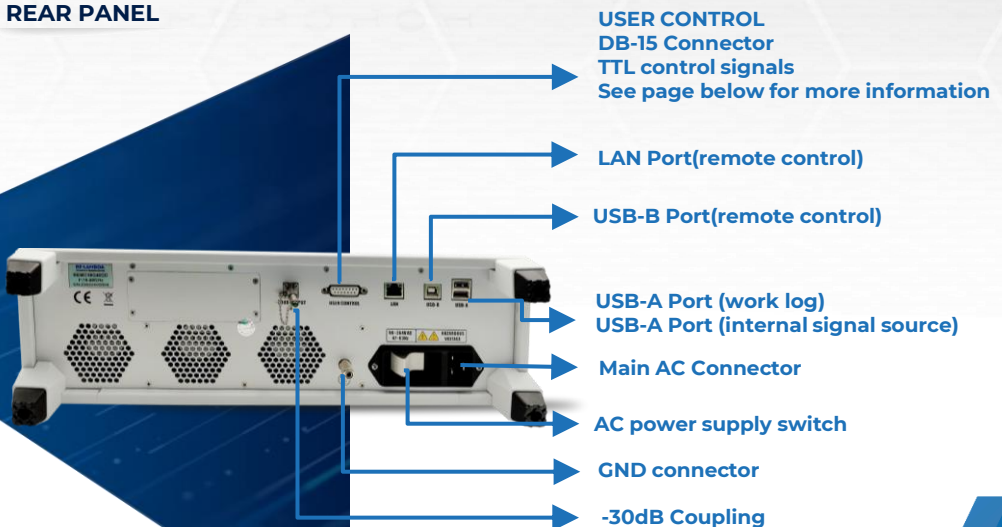

OUTLINE DRAWING

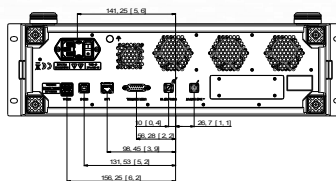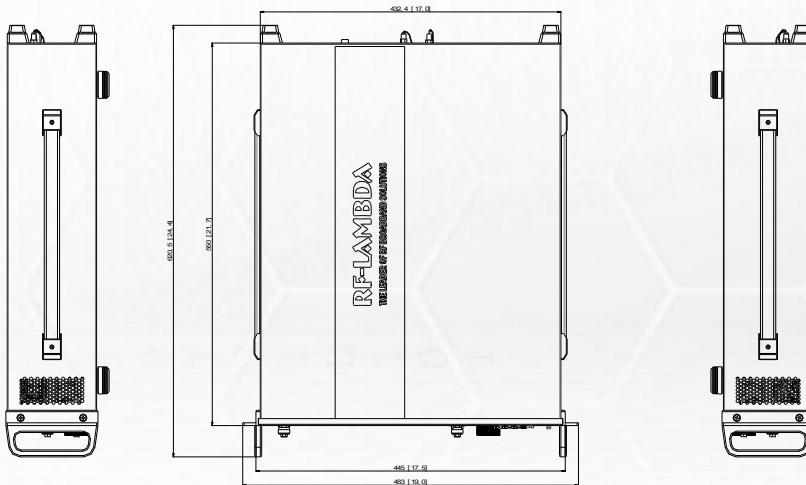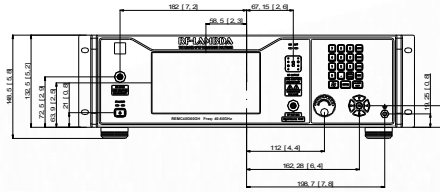


Notes:

1. Package Material: Aluminum
2. Finish: White Baking Paint
3. All dimensions are in millimeters [inches].
4. Standard torque wrench must be used to secure RF connectors.

PROTECTION CONNECTOR TABLE

Female D-Sub is on the housing
The mating male part number: 172-E15-103R001

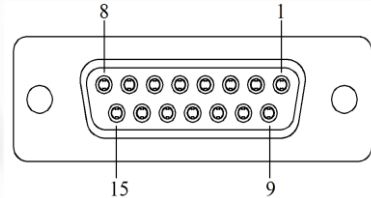

Pin #	Name	Function	Initial State	Description	Applied
1	Reset	Control	HIGH	Resets PA when logic LOW is applied for five more seconds and released	Yes
2	Gate Disable	Control	LOW	Applying logic HIGH disables gate of amplifiers	Yes
3	Drain Disable	Control	LOW	Applying logic HIGH disables drain of amplifiers	Yes
4	RF Input Over Drive	Indicator	LOW	Pin will be latched to logic HIGH when input signal is over limit	Yes
5	Temperature Over	Indicator	LOW	Pin will be latched to logic HIGH when amplifier is driven over temperature	Yes
6	Current Over	Indicator	LOW	Pin will be latched to logic HIGH when drain current limit is reached	Yes
7	Current Imbalance	Indicator	LOW	Pin will be latched to logic HIGH when an imbalance in the drain current of the combining branches occurs	Yes
8	PA Off Alarm	Indicator	LOW	Pin will be latched to logic HIGH when any of the protection limit is reached	Yes
9	Fan Alarm	Indicator	LOW	Pin will be latched to logic HIGH when Fan limit is reached	Yes
10	RF Input Switch	Control	LOW	Applying logic HIGH turns OFF RF front-end switch to terminator	Yes
11	VSWR	Indicator	LOW	Pin will be latched to logic HIGH when output reflection is over limit	Yes
12	Fixed Attenuation 10dB	Control	LOW	Applying and holding logic HIGH to enable 10dB fixed attenuation	Yes
13	Fixed Attenuation 20dB	Control	LOW	Applying and holding logic HIGH to enable 20dB fixed attenuation	Yes
14	+5V	Power Supply	+5V	+5V DC is provided for reference *	Yes
15	GND	GND	GND	GND	Yes

Notes:

- HIGH/LOW voltages are standard TTL signals 0.0V-0.8V = LOW, 2.8V-5V = HIGH. Input current is 10uA.
- Matching connector and cable will be shipped with the product.
- Applied=Yes means the feature is included. Applied=No means the feature is not included with this model.
- 5V reference supply can source 700mA.
- Indicator output signals can source 24mA.

PACKING LIST

ID	Description	QTY
1	Fig a. AC power supply line (Consulting sales)	1
2	Fig b. DB15 cable (RFCBLADB15)	1
3	Fig c. Waveguide to coaxial adapter (RFWA19V0COAL) (Consulting sales)	0



Fig a.



Fig b.



Fig c.

ORDERING INFORMATION

Part Number	Modification	Description
REMC40G60GH	Input connector 1.85mm-Male and Output connector WR19	40GHz - 60GHz Wideband EMC Benchtop Power Amplifier

AMPLIFIER USE

Ensure that the amplifier input and output ports are safely terminated into a proper 50 ohm load before turning on the power. Never operate the amplifier without a load. A proper 50 ohm load is defined as a load with impedance less than 1:1 or return loss larger than 10dB relative to 50 Ohm within the specified operating band width.

Power Supply Requirements

Power supply must be able to provide adequate current for the amplifier. Power supply should be able to provide 1.5 times the typical current or 1.2 times the maximum current (whichever is greater).

In most cases, RF - Lambda amplifiers will withstand severe mismatches without damage. However, operation with poor loads is discouraged. If prolonged operation with poor or unknown loads is expected, an external device such as an isolator or circulator should be used to protect the amplifier.

Ensure that the power is off when connecting or disconnecting the input or output of the amp.

Prevent overdriving the amplifier. Do not exceed the recommended input power level.

Adequate heat-sinking required for RF amplifier modules. Please inquire.

Amplifiers do not contain Thermal protection, Reverse DC polarity or Over voltage protection with the exception of a few models. Please inquire.

Proper electrostatic discharge (ESD) precautions are recommended to avoid performance degradation or loss of functionality.

What is not covered with warranty?

Each RF - Lambda amplifier will go through power and temperature stress testing.

Since the die, ICs or MMICs are fragile, these are not covered by warranty. Any damage to these will NOT be free to repair.

IMPORTANT NOTICE

The information contained herein is believed to be reliable. RF-Lambda makes no warranties regarding the information contained herein. RF-Lambda assumes no responsibility or liability whatsoever for any of the information contained herein. RF-Lambda assumes no responsibility or liability whatsoever for the use of the information contained herein. The information contained herein is provided "AS IS, WHERE IS" and with all faults, and the entire risk associated with such information is entirely with the user. All information contained herein is subject to change without notice. Customers should obtain and verify the latest relevant information before placing orders for RF-Lambda products. The information contained herein or any use of such information does not grant, explicitly or implicitly, to any party any patent rights, licenses, or any other intellectual property rights, whether with regard to such information itself or anything described by such information.

RF-Lambda products are not warranted or authorized for use as critical components in medical, life-saving, or life sustaining applications, or other applications where a failure would reasonably be expected to cause severe personal injury or death.